


MP 1500 MP 1500 Aficio MP 1500 IS 2315

Operating Instructions



- 1 Getting Started
- 2 Placing Originals
- 3 Copying
- 4 User Tools
- 5 Troubleshooting
- 6 Other Functions
- 7 Remarks
- 8 Security
- 9 Specifications

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

••••••••••

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Laser Safety:

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains a 5-milliwatt, 760-800 nanometer wavelength, GaAlAs laser diode. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is attached on the back side of the machine.



Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

Power Source

220V-240V. 50/60Hz. 7A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see p.65 "Power Connection".

TABLE OF CONTENTS

Trademarks	
Notice	
How to Read This Manual	
Safety Information	
Safety During Operation	
Positions of Labels and Hallmarks for AWARNING a	
ENERGY STAR Program	
ENERGY STAR Program	<i>1</i>
1. Getting Started	
Guide to Components	9
Options	
External Options	
Control Panel	
Display	
Reading the Display and Using Keys	
Turning On the Power	
Turning On the Main Power	15
Turning On the Power	
Turning Off the Power	
Turning Off the Main Power	
Saving Energy	16
2. Placing Originals	
Originals	17
Sizes and Weights of Recommended Originals	
Missing Image Area	
Placing Originals	19
Original Orientation	19
Placing Originals on the Exposure Glass	
Placing Originals in the ADF	20
3. Copying	
Basic Procedure	
Copying from the Bypass Tray	
Copier Functions	
Adjusting Image Density	
Selecting Original Type Setting	
Selecting Copy Paper	
Preset Reduce/Enlarge	29
Zoom	
Sort	
Changing the number of sets	31

4. User Tools

User Tools Menu (System Settings)	33
User Tools Menu (Copier Settings)	
Accessing User Tools	
Changing Default Settings	
Quitting User Tools	
Settings You Can Change with User Tools	38
System Settings	
Copier Features	42
User Code	44
Registering a New User Code	44
Changing a User Code	
Deleting a User Code	
Displaying the Counter for Each User Code	46
Printing the Counter for Each User Code	
Clearing the Counter	47
5. Troubleshooting	
If Your Machine Does Not Operate As You Want	49
If You Cannot Make Clear Copies	
If You Cannot Make Copies As You Want	
When Memory Is Full	
Loading Paper	
Loading Paper	
Orientation-Fixed Paper or Two-Sided Paper	
🛓 Adding Toner	
Handling Toner	
Toner Storage	54
Used Toner	54
Removing Toner	55
Inserting Toner	56
% Clearing Misfeeds	57
Changing the Paper Size	
Changing the Paper Size of the Paper Tray	
6. Other Functions	
Other Functions	61
Displaying the Total Counter	
Changing the Language	61

7. Remarks

Do's and Don'ts			
Where to Put Your Machine	64		
Machine Environment			
Moving			
Power Connection			
Access to the Machine	66		
Maintaining Your Machine	67		
Cleaning the Exposure Glass			
Cleaning the Exposure Glass Cover			
Cleaning the ADF			
-			
8. Security			
Security			
Primary Security Functions			
Operating Environment and Notes			
Operating Environment			
For Administrator			
9. Specifications			
Main Unit			
Options	74		
Exposure Glass Cover			
Auto Document Feeder (ADF)			
Combination Chart			
Supplementary Information			
Copy Paper			
Recommended Paper Sizes and Types			
Unusable Paper			
Paper Storage	80		
INDEX	81		

Copyrights and Trademarks

Trademarks

 $Microsoft^{\otimes}$, $Windows^{\otimes}$ and Windows NT^{\otimes} are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Acrobat® is a registered trademark of Adobe Systems Incorporated.

BluetoothTM is a trademark of the Bluetooth SIG, Inc. (Special Interest Group) and is used by RICOH Company Limited under license.

Copyright ©2001 Bluetooth SIG, Inc.

The Bluetooth Trademarks are owned by Bluetooth SIG, Inc. USA.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product name of Windows® 95 is Microsoft® Windows® 95
- The product name of Windows® 98 is Microsoft® Windows® 98
- The product name of Windows® Me is Microsoft® Windows® Millennium Edition (Windows Me)
- The product names of Windows® 2000 are as follows: Microsoft® Windows® 2000 Professional Microsoft® Windows® 2000 Server Microsoft® Windows® 2000 Advanced Server
- The product names of Windows[®] XP are as follows: Microsoft[®] Windows[®] XP Home Edition Microsoft[®] Windows[®] XP Professional
- The product names of Windows ServerTM 2003 are as follows: Microsoft[®] Windows ServerTM 2003 Standard Edition Microsoft[®] Windows ServerTM 2003 Enterprise Edition Microsoft[®] Windows ServerTM 2003 Web Edition
- The product names of Windows NT[®] 4.0 are as follows: Microsoft[®] Windows NT[®] Workstation 4.0 Microsoft[®] Windows NT[®] Server 4.0

Notice

Important

Do not copy or print any item for which reproduction is prohibited by law. Copying or printing the following items is generally prohibited by local law: bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

How to Read This Manual

Symbols

The following set of symbols is used in this manual.

⚠ WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

* The statements above are notes for your safety.

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates information or preparations required prior to operating.

Note

This symbol indicates precautions for operation, or actions to take after abnormal operation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

This symbol indicates a reference.

[]

Keys that appear on the machine's display panel.

Keys built into the machine's control panel.

Safety Information

When using this machine, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

⚠ WARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

↑ CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

↑ WARNING:


- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
 - You spill something into the machine.
 - You suspect that your machine needs service or repair.
 - The external housing of your machine has been damaged.
- Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.
- Disposal can take place at our authorized dealer.
- Dispose of the used toner bottle in accordance with the local regulations.
- Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.
- Do not damage, break or make any modifications to the power cord.
 Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

↑ CAUTION:

- Protect the machine from dampness or wet weather, such as rain and snow.
- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.
- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- Keep toner (used or unused) and toner bottle out of the reach of children.
- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.
- The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise, an injury might occur.
- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.
- Before moving the machine, be sure to pull all four handles fully out. If not, an injury might occur. After moving the machine, return the four handles to their original positions.
- When the optional paper tray unit is installed, do not push the upper part of the main unit horizontally. An injury might occur if the paper tray unit becomes detached from the main unit.
- If you use the machine in a confined space, make sure there is a continuous air turnover.
- Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur.

Positions of Labels and Hallmarks for **AWARNING** and **ACAUTION** Labels

This machine has labels for <u>AWARNING</u> and <u>ACAUTION</u> at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

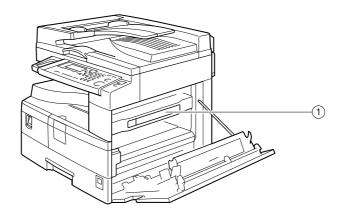

CAUTION
ATTENTION
S.01
ACHUNG
ACHUNG
PRECAUCION
PRECAUC

•High temperature. Be careful of hot parts when clearing paper jams.

*Température élevée, Attention aux pièces chaudes en supprimant un bourrage papier.

*고은이므로 용지 걸림 제거시 주의해 주십시오.

*Vorsicht hohe Temperaturent Achten Sie auf heisse Geräteteile, wenn Sie einen Papierstau beheben.

- Temperatura elevata. Fare attenzione alle parti calde quando si eliminano gli inceppamenti della carta.
- Alta temperatura. Tenga cuidado con las partes calientas cuando elimine los atascamientos de papel.
- 高温、夏坎基特等,

高温です。用紙づまり処理は、高温部分に注意しながら行ってください

APH002S

ENERGY STAR Program



As an ENERGY STAR Partner, we have determined that this machine model meets the ENERGY STAR Guidelines for energy efficiency.

The ENERGY STAR Guidelines intend to establish an international energy-saving system for developing and introducing energy-efficient office equipment to deal with environmental issues, such as global warming.

When a product meets the ENERGY STAR Guidelines for energy efficiency, the Partner shall place the ENERGY STAR logo onto the machine model.

This product was designed to reduce the environmental impact associated with office equipment by means of energy-saving features, such as Low-power mode.

Low Power mode

This product automatically lowers its power consumption 1 minute after finishing the last copy job. To make copies, you have to press the operation switch first.

For details about how to change the interval between last job and Low Power mode, see p.39 "Energy Saver Timer".

Off mode

To conserve energy, this product automatically turns off 1 minute after finishing the last copy job. In this manual, the Off mode is called the Auto Off mode. For details about how to change the interval between last job and Auto Off mode, see p.39 "Auto Off Timer".

Note

- If you want to operate this product while it is in either of these modes, do one of the following:
 - Turn on the operation switch.
 - Place originals in the ADF (Auto Document Feeder).
 - Lift the exposure glass cover or ADF.

Specifications


Off mode	Power consumption	less than 1 W
	Default interval	1 minute
	Recovery time	Less than 10 seconds

Recycled Paper

In accordance with the ENERGY STAR Program, we recommend use of recycled paper which is environmentally friendly. Please contact your sales representative for recommended paper.

1. Getting Started

Guide to Components

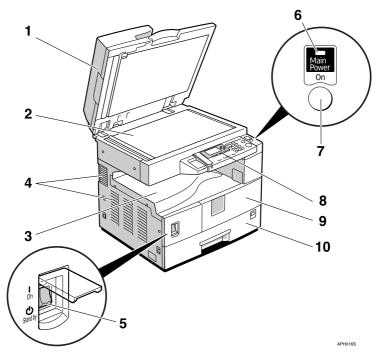

1. Exposure glass cover (optional) or ADF (optional).

See p.11 "External Options" (The illustration shows the ADF.)

2. Exposure glass

Place originals here face down.

3. Internal tray

Copied paper is delivered here.

4. Ventilation holes

Prevents overheating. Do not obstruct the ventilation holes by placing objects near them or leaning things against them. If the machine overheats, a fault might occur.

5. Main power switch

If the machine does not operate after turning on the operation switch, check the main power switch is turned on. If it is off, turn it on.

6. Main power indicator

Lights when the main power switch is turned on, and goes off when the switch is turned off.

7. Operation switch (On indicator)

Press to turn the power on (the On indicator lights). To turn the power off, press again (the On indicator goes off).

8. Control panel


See p.12 "Control Panel".

9. Front cover

Open to access the inside of the machine.

10. Paper tray

Load paper here.

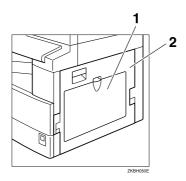

1. Bypass tray


Use to copy onto OHP transparencies, adhesive labels, translucent paper, envelopes, and custom size paper.

2. Right cover

Open this cover to remove jammed paper fed from the paper tray.

Options

External Options

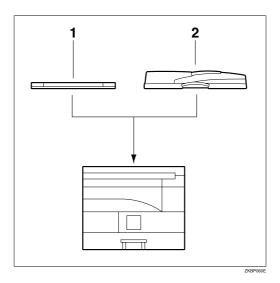

1. Exposure glass cover


Lower this cover over originals.

2. ADF

Place stacks of originals here. They will feed in automatically.

Control Panel

This illustration shows the control panel of the machine with options fully installed.

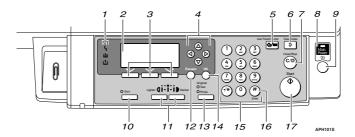

1. Indicators

Display errors and machine status.

\(\) : Error indicator. See p.57 "**\(\)** Clearing Misfeeds".

≜: Load Paper indicator. See p.52 "**≜** Loading Paper".

Last: Add Toner indicator. See p.54 "Last Adding Toner".

2. Display

Displays operation status and messages.

3. Selection keys

Correspond to items on the display. Press to select the corresponding item.

4. Scroll keys

Press to select an item.

[▲]: scroll upward

[▼]: scroll downward

[▶]: scroll right

【◀】: scroll left

See p.14 "Reading the Display and Using Keys".

5. [User Tools/Counter] key

• User Tools

Press to change default or operation parameters according to requirement. See p.36 "Accessing User Tools".

Counter

Press to check or print the counter value. See p.61 "Other Functions".

6. [Clear Modes] key

Press to clear the current settings.

7. [Clear/Stop] key

• Clear:

Clears an entered numeric value.

Stop:

Stops a job in progress, such as scanning, or printing.

8. Main power indicator

The main power indicator lights when the main power switch is turned on.

#Important

Do not turn off the main power switch while the On indicator is lit or blinking. Doing so may damage the memory.

p.15 "Turning On the Power"

9. Operation switch (On indicator)

Press to turn the power on. The On indicator lights. To turn the power off, press again.

Note

☐ This key is inactivate during scanning or while setting defaults.

p.15 "Turning On the Power"

10. [Sort] key

Automatically sorts copies.

11. [Lighter] and [Darker] keys

Press to change the image density setting. Select the image density in three increments, Lighter to Darker.

12. [Escape] key

Press to cancel an operation or return to the previous display.

13. [Original Type] key

Press to select the original type registered in [Original Type 1 (Text)] or [Original Type 2 (Photo)]. When the original type is selected, the corresponding indicator lights.

14. [OK] key

Press to set a selected item or an entered numeric value.

15. Number keys

Press to enter numeric values.

16. [#] key

Press to set a selected item or an entered numeric value.

17. [Start] key

Press to start copying, printing, or scanning or sending.


Display

The display panel shows machine status, error messages, and function menus.

#Important

 \square A force or impact of more than 30 N (about 3 kgf) will damage the display.

Initial copy display

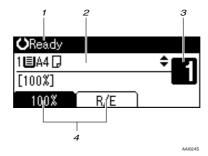


- 1. Operational status or messages
- 2. Messages and the selected tray appear here. Currently selected items appear in brackets.
- 3. Number of copies set.
- 4. Reduce/Enlarge ratio function for non-fixed ratios.

When you select or specify an item on the display, it is highlighted like 100%

Reading the Display and Using Keys

This section explains how to read the display and use the Selection keys.



1. Selection keys

Correspond to items at the bottom line on the display.

Example: The Copy display

- When the instruction "press [100%]"
 appears in this manual, press the left
 selection key.
- When the instruction "press [R/E]" appears in this manual, press the centre selection key.

2. [Escape] key

Press to cancel an operation or return to the previous display.

3. **[OK]** key

Press to set a selected item or an entered numeric value.

4. Scroll keys

Press to move the cursor in each direction, step by step.

When the $[\ \]$, $[\ \ \]$, or $[\ \ \]$ key appears in this manual, press the scroll key of the same direction.

Common key operations

The following keys are common to all screens:

❖ Key list

[Cancel]	Deletes a selected function or entered values, and then the previous display returns.
[Exit]	The previous display returns.
[Stop]	Stops a job in progress.
[Yes]	Acknowledges a selected function or an entered values.
[Stop]	Cancels a selected function or entered values, and then the previous display returns.

Turning On the Power

This machine has two power switches.

Operation switch (right side of the control panel)

Press to activate the machine. When the machine has finished warming up, you can operate the machine.

Main power switch (left side of the machine)

Turning off this switch makes the main power indicator on the right side of the control panel go off. When this is done, machine power is completely off.


Note

☐ This machine automatically enters Energy Saver mode or turns itself off if you do not use it for a while.

Turning On the Main Power

- Make sure the power cord is firmly plugged into the wall outlet.
- **2** Turn on the main power switch.

The main power indicator goes on.

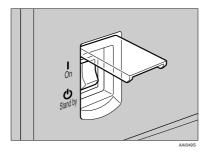


#Important

Do not turn off the main power switch immediately after turning it on. Doing so may result in damage to the memory, leading to malfunctions.

Turning On the Power

1 Press the operation switch.

The **On** indicator goes on.

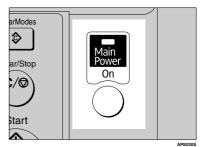


Note

☐ If the power does not come on when the operation switch is pressed, check the main power switch is on. If it is off, turn it on.

Turning Off the Power

1 Press the operation switch.

The **On** indicator goes off.

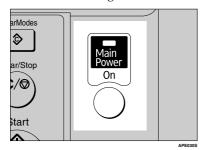

Turning Off the Main Power

∰Important

- Do not turn off the main power switch when the **On** indicator is lit or blinking. Doing so may result in damage to the memory.
- Be sure to turn off the main power switch before pulling out the power plug. Not doing this may result in damage to the memory.
- **1** Be sure the On indicator is not lit.
- **2** Turn off the main power switch.

The main power indicator goes out.

Saving Energy

Ω /

Auto Off / Low Power

The machine automatically turns itself off when the job is finished, after a certain period of time has elapsed. This function is called "Auto Off".

Note

- ☐ You can change the Auto Off time.
- ☐ The Auto Off Timer function will not operate in the following cases:
 - When a warning message appears
 - When the service call message appears
 - When paper is jammed
 - When the cover is open
 - When the "Add toner "message appears
 - When toner is being replenished
 - When the User Tools screen is displayed
 - When fixed warm-up is in progress

2. Placing Originals

Originals

Sizes and Weights of Recommended Originals

❖ Metric version

Original location	Original size	Original weight
Exposure glass	Up to A3	
ADF	One-sided originals: A3D – A5DD	$40-128 \text{ g/m}^2$

❖ Inch version

Original location	Original size	Original weight
Exposure glass	Up to 11" × 17"	
ADF	One-sided originals:	11–34 lb.
	$11" \times 17" \square - 5^1/_2" \times 8^1/_2" \square \square$	

𝒜 Note

☐ About 30 originals can be placed in the ADF.

Non-compatible originals for the ADF

Placing the following types of originals in the ADF can cause paper misfeeds or result in damage to the originals. Place these originals on the exposure glass instead.

- Originals other than those specified on p.17 "Sizes and Weights of Recommended Originals"
- Stapled or clipped originals
- · Perforated or torn originals
- Curled, folded, or creased originals
- · Pasted originals
- Originals with any kind of coating, such as art paper, aluminum foil, carbon paper, or conductive paper
- Originals with perforated lines
- · Originals with indexes, tags, or other projecting parts
- · Sticky originals such as translucent paper
- Thin, highly flexible originals
- · Thick originals such as postcards
- Bound originals such as books
- Transparent originals such as OHP transparencies or translucent paper



☐ The original might become dirty if it is written with a pencil or a similar tool

Missing Image Area

Even if you place originals in the ADF, or on the exposure glass correctly, 4 mm (0.2") margins on all four sides might not be copied.

Placing Originals

Note

☐ Take care to place originals only after any correction fluid and ink has completely dried. Not taking this precaution could cause marks on the exposure glass that will be copied onto paper.


For original sizes you can set, see p.17 "Originals".

Original Orientation

You can set the original orientation in the following ways.

This function is useful for copying torn or large originals.

Originals should normally be aligned to the rear left corner. However, some copy functions may produce different results depending on the orientation of the originals. For details, see the explanations of each function.

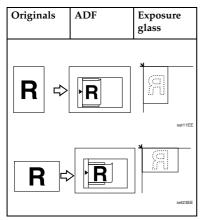

Placing Originals on the Exposure Glass


Lift the exposure glass cover or ADF.

#Important

Do not lift the exposure glass cover or ADF forcefully. If you do, the ADF cover might open or be damaged.

Note

- ☐ Be sure to lift the exposure glass cover or ADF by more than 30°. Otherwise, the size of the original might not be detected correctly.
- Place the original face down on the exposure glass. It should be aligned with the rear left corner.

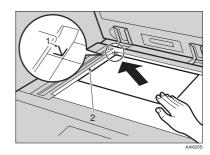

- 1. Positioning mark
- 2. Left scale

Note

- ☐ Start with the first page to be copied.
- Lower the exposure glass cover or ADF.


Placing Originals in the ADF

Settings should be made in the following situations:

When placing custom size originals: p.20 "Placing custom size originals"

- Do not stack originals over the limit mark on the side fence of the ADF.
- ☐ The last page should be on the bottom.
- □ Do not cover the sensors with your hands, or place objects on them. Doing so could cause the size to be detected incorrectly, or the paper misfeed error message to appear. Also, do not place anything on the cover, as this too could cause a malfunction.


❖ ADF

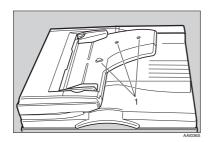

1. Sensor

Set the document guide to the original size.

Align the edges of the originals and place them in the ADF with the side to be copied facing up.

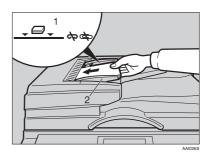

1. Limit mark

2. Document guide

Note


- ☐ Straighten curls in the originals before placing them in the ADF.
- ☐ To prevent multiple sheets feeding in at once, fan the originals before placing them in the ADF.
- \square Set the original squarely.

Placing custom size originals


When placing custom size originals in the ADF, specify the size of the originals.

Ø Note

- ☐ Paper that has a vertical length of 105–297 mm (4.2"–11.6") and a horizontal length of 128–1260 mm (5.1"–49.6") can be placed with this function.
- Select the paper tray using [▲] or [▼], and then press the [#] key.




Select [Custom Size] using [▲] or [▼] key, and then press the [OK] key.



- When [Auto Detect] is selected, the size of the placed original will be detected automatically.
- Enter the horizontal size of the original using the number keys, and then press the [OK] key.




- ☐ If you make a mistake, press the **[Clear/Stop]** key, and then enter the value again.
- Enter the vertical size of the original using the number keys, and then press the [OK] key.



The "Programmed" message appears with your set original size.


When the custom size originals settings are registered, **Aeady appears on the top of copy display.




- Note
- ☐ To cancel the size you have set, press the [Clear Modes] key.

Placing regular size originals

Select the paper tray using [▲] or [▼] key, and then press the [#] key.



Select [Regular Size] using [▲] or [▼] key, and then press the [OK] key.




- Note
- ☐ When **[Auto Detect]** is selected, the size of the placed original will be detected automatically.

Select the paper size using the scroll keys, and then press [OK] key.

Regular Size:	1/3 ♦ • OK
A3₾	A4 🖺
A4₾	A5 🖺
A5 ८ ⊐	B4Jis ≝ ⊐

The "Programmed" message appears.

When the regular size originals settings are registered, **Ready appears on the top of copy display.



Note

☐ To cancel the size you have set, press the **[Clear Modes]** key.

3. Copying


Basic Procedure

If the machine has user codes set, enter a user code (up to eight digits) using the number keys, and then press the [OK] or [#] key.

The machine is ready to copy.

For user codes, see p.40 "Key Operator Tools".

- Make sure "O Ready" appears on the display.
 - Initial copy display




Make sure no previous settings remain.

Note

- When there are previous settings remaining, press the [Clear Modes] key and enter again.
- Place your originals.
 - Reference p.19 "Placing Originals"
- **5** Make the necessary settings.

See the explanations for each function.

6 Enter the number of copies using the number keys.



- ☐ The maximum copy quantity that can be set is 99.
- Press the [Start] key.

Copying starts.

☐ Copies are delivered face down.

How to operate

To switch between pages or select functions:

Press the scroll key.

To stop the machine during a multicopy run:

Press the [Clear/Stop] key.

To return the machine to the initial condition after copying:

Press the [Clear Modes] key.

❖ To clear an entered value. Press the [Clear/Stop] key.

Copying from the Bypass Tray

Use the bypass tray to copy onto OHP transparencies, thick paper, envelopes and copy paper that cannot be loaded in the paper tray.

#Important

☐ Paper longer than 433 mm may become wrinkled, may not feed in, and may jam.

Note

☐ If you do not use standard size copy paper, or if you use special paper, you should enter its vertical and horizontal dimensions. See p.20 "Placing custom size originals". The sizes you can enter are as follows:


Metric version		Vertical: 90–297 mm Horizontal: 148–600 mm
Inch	•	Vertical: 3.55"-11.69"
version	•	Horizontal: 5.83"-23.62"

☐ The machine can automatically detect the following sizes as regular size copy paper:


	A3□, A4□□, A5□□, 8"× 13"□
Inch	$11" \times 17" \square, 8^1/_2" \times 11" \square \square, $
version	$5^1/_2" \times 8^1/_2" \square, 8^1/_2" \times 14" \square$

- □ When copying onto OHP transparencies or paper heavier than 105 g/m² (about 28 lb.), you need to specify the paper type. See p.26 "When copying onto special paper".
- ☐ The maximum number of sheets you can load at the same time depends on paper type. The maximum number of sheets should not exceed the upper limit.

1 Open the bypass tray.

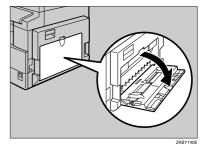


Push up the paper guide release lever.

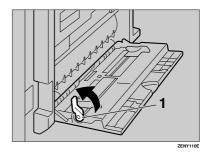

1. Paper guide release lever

Insert the paper with the side you want to copy facing down, and then adjust the paper guide with the paper size.

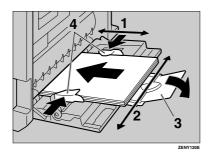


- 1. Horizontal size
- 2. Vertical size
- 3. Extender
- 4. Paper guides

Note

- ☐ If the guides are not flush against the copy paper, images might be skewed or paper misfeeds might occur.
- Do not stack paper over the limit mark, otherwise images might be skewed or paper misfeeds might occur.
- ☐ Swing out the extender to support paper sizes larger than $A4\Box$, $8^{1}/_{2}" \times 11"\Box$.
- Fan paper to get air between the sheets and avoid a multi-sheet feed.

Pull down the paper guide release lever (step **2**).

The bypass tray is selected on the display.




- ☐ If [Byp.] is not selected on the display, select [Byp.] using [▲] or [▼], and then press the [#] key.
- **5** Select the paper size and type.

When copying onto regular size paper


Select [Paper Size] using [▲] or [▼], and then press the [OK] key.



② Select [Regular Size] using [▲] or [▼], and then press the [OK] key.



3 Select the paper size using the scroll keys, and then press the [OK] key.




The "Programmed "message appears.


When copying onto custom size paper

∰Important


- You should specify the size of copy paper to avoid paper misfeeds.
- Select [Paper Size] using [▲] or [▼], and then press the [OK] key.



② Select [Custom Size] using [▲] or [▼], and then press the [OK] key.



3 Enter the horizontal size of the original using the number keys, and then press the [OK] key.



Note


- ☐ If you make a mistake, press the [Clear/Stop] key, and then enter the value again.
- 4 Enter the vertical size of the original using the number keys, and then press the [OK] key.




The "Programmed message appears.

When copying onto special paper

Select [Paper Type] using [▲] or [▼], and then press the [OK] key.




Select the paper type, and then press the [OK] key.




The "Programmed message appears.

When copying onto envelopes


Select [Paper Size] using [▲] or [▼], and then press the [OK] key.



② Select [Regular Size] using [▲] or [▼], and then press the [OK] key.




③ Select the envelope size from [C6 env□] [C5 env□] [DL env□], and then press the [OK] key.




The "Programmed "message appears.


4 Press the [#] key.



Select [Paper Type] using [▲] or [▼], and then press the [OK] key.



Select [Thick Paper] using [▲] or [▼], and then press the [OK] key.



The "Programmed "message appears.

Place your originals, and then press the [Start] key.

Note

☐ When copying onto OHP transparencies, remove copied sheets one by one.

3


Copier Functions

Adjusting Image Density

You can adjust copy image density to match your originals.

If you require darker or lighter copies, adjust image density accordingly.

Press the [Lighter] or [Darker] key to adjust the density.

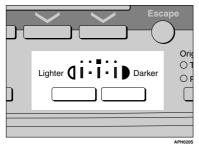

Selecting Original Type Setting

Select one of the following two types to match your originals:

❖ Text


Select this when your originals contain only text (no pictures).

Photo

This can reproduce delicate tones of photographs and pictures.

p.42 "Original Type Setting"

Press the [Original Type] key and select the original type.

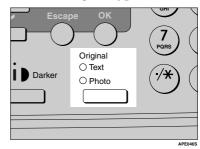

☐ Press the [Original Type] key to go through the following types:


Upper indicator lit	Text
Lower indicator lit	Photo

Selecting Copy Paper

Choose the tray containing the paper you want to copy onto: a paper tray or the bypass tray.

Select the paper tray or bypass tray using [▲] or [▼].


The selected tray and the paper size appear.



p.24 "Copying from the Bypass Tray"


Preset Reduce/Enlarge

You can select a preset ratio for copying.

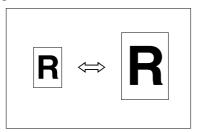


Base Point

The base point of Reduce/Enlarge differs depending on how the original is scanned. When the original is placed on the exposure glass, the upper left corner is the base point. When placed in the ADF, the bottom left corner is the base point.

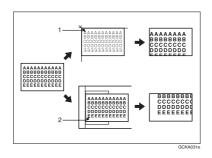


- 1. Base point when placing on the exposure glass.
- 2. Base point when placing in the ADF.

Related default settings p.43 "Reproduction Ratio" p.43 "Preset R/E Priority" Press [R/E].



Press [Reduce] or [Enlarge].




Select a ratio using [♠] or [▼], and then press the [OK] key.

The "Programmed "message appears.

Place your originals, and then press the [Start] key.

Zoom

You can change the reproduction ratio in increments of 1%.

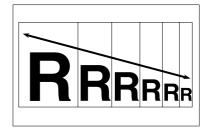


Note


☐ You can also select a preset ratio close to the desired ratio using [Reduce] or [Enlarge], and then adjust the ratio using [▲] or [▼].

2


Press [R/E].



Press [Zoom].



3 Enter the ratio.



To select the ratio using [\blacktriangle] and [\blacktriangledown]

- Adjust the ratio using [▲] or [▼].
 - Note
 - ☐ If you have incorrectly entered the ratio, readjust using[▲] or [▼].
 - ☐ To change the ratio in increments of 10%, press and hold down [▲] or [▼].
- 2 Press the [OK] key.

The "Programmed message appears.

To enter the ratio using the number keys

- Enter the desired ratio using the number keys.
- 2 Press the [OK] key.

The "Programmed message appears.


Place your originals, and then press the [Start] key.

Sort


You can scan originals into memory and automatically sort copies.

❖ Sort

Copies are assembled as sequentially ordered sets.




Press the [Sort] key.

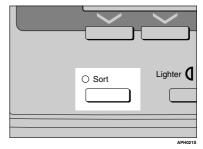

Note

☐ When canceling the Sort function, press the [Sort] key, and make sure the [Sort] key indicator is off.

2 Enter the number of copy sets using the number keys.




- Place your originals.
 - Note
 - ☐ When placing originals on the exposure glass, start from the first page to be copied. When placing originals in the ADF, set the first page on top.
- Press the [Start] key.
 - Ø Note
 - When placing originals on the exposure glass, press the [#] key after all originals are scanned.


Changing the number of sets

You can change the number of copy sets during copying.

- ☐ This function can only be used when the Sort function is selected.
- While "copying..." is displayed, press the [Clear/Stop] key.
- Press [Sets].

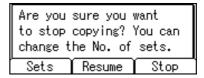

Enter the number of copy sets with the number keys, and then press [Resume].



Copying starts again.

- Note
- ☐ The number of sets you can enter differs depending on when the [Clear/Stop] key is pressed.

4. User Tools

User Tools Menu (System Settings)

❖ General Features (See p.38 "General Features".)

	Default
Copy Count Display	Up
Display Contrast	Centre
Key Repeat	On
Measurement Unit	Metric version: mm
	Inch verion: inch

❖ Tray Paper Settings (See p.38 "Tray Paper Settings".)

	Default	
Tray Paper Size: Tray 1	Metric version: $8^1/_2$ " $\times 11$ " \square	
	Inch version: A4□	
Paper Type: Bypass tray	Thick Paper	

❖ Timer Settings (See p.39 "Timer Settings".)

	Default
Auto Off Timer	1 min.
Energy Saver Timer	1 min.
System Auto Reset Timer	60 sec.
Copier Auto Reset Timer	60 sec.

❖ Key Operator Tools (See p.40 "Key Operator Tools".)

		Default
User Code Man.: Copier		Off
Key Counter Management		Off
Key Operator Code		Off
Display/Print Counter		_
Counter per User Code	Display	_
	Print	_
	Clear	_
Program/Change User Code	Program	_
	Change	_
	Delete	_
AOF (Always On)		On

User Tools Menu (Copier Settings)

Copier Features (See p.42 "Copier Features".)

	Default	
Original Type Setting	Original Type 1 (Text): Text Mode 1	
	Original Type 2 (Photo): Photo Mode 1	
Max. Number of Sets	99 sheets	
Original Count Display	Off	
Reproduction Ratio	Metric version:	
	• Ratio 1: 50%	
	• Ratio 2: 71%	
	• Ratio 3: 82%	
	• Ratio 4: 93%	
	• Ratio 5: 122%	
	• Ratio 6: 141%	
	• Ratio 7: 200%	
	Inch version:	
	• Ratio 1: 50%	
	• Ratio 2: 65%	
	• Ratio 3: 78%	
	• Ratio 4: 93%	
	• Ratio 5: 121%	
	• Ratio 6: 129%	
	• Ratio 7: 155%	
Preset R/E Priority	Metric version: 71%	
	Inch version: 65%	
Letterhead Setting	Off	

Accessing User Tools

This section is for key operators in charge of this machine.

User Tools allow you to change or set defaults.

Note

- ☐ Operations for system settings differ from normal operations. Always quit User Tools when you have finished. See p.37 "Quitting User Tools".
- ☐ Selected settings are highlighted.
- Any changes you make with User Tools remain in effect even if the main power switch or operation switch is turned off, or the [Clear Modes] key is pressed.

Changing Default Settings

Note


- ☐ If a key operator code is already set, the key operator code entry display appears. Enter the key operator code, and then press the [OK] key. See p.40 "Key Operator Code".
- 1 Press the [User Tools/Counter] key.



Select [System Settings] or [Copier Features] using [▲] or [▼], and then press the [OK] key.




Select the menu using [▲] or [▼], and then press the [OK] key.



p.33 "User Tools Menu (System Settings)" p.35 "User Tools Menu (Copier Settings)".

4 Select the item using [▲] or [▼], and then press the [OK] key.




Change settings by following instructions on the display, and then press the [OK] key.

Note

☐ To cancel changes made to settings and return to the initial display, press the [User Tools/Counter] key.

Quitting User Tools

1 Press the [User Tools/Counter] key.

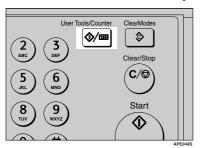

Settings You Can Change with User Tools

To access User Tools, see p.36 "Accessing User Tools".

System Settings

General Features

Copy Count Display

The copy counter can be set to show the number of copies made (count up), or the number of copies yet to be made (count down).

Note

□ Default: *Up* (*count up*)

Display Contrast

You can adjust the brightness of the display.

Key Repeat

You can select whether or not to use the key repeat function.

Note

□ Default: On

Measurement Unit

You can switch the measurement between "mm" and "inch".

Note

☐ Default:

• Metric version: mm

• Inch version: inch

Tray Paper Settings

Tray Paper Size: Tray 1

Select the size of the paper loaded in the paper tray.

• The paper sizes you can set for Tray 1 are as follows:

A3□, B4JIS (Japanese Industrial Standard)□, A4□□,

B5JIS□□, A5□, 11" × 17"□,

8¹/₂" × 14"□, 8¹/₂" × 13"□, 8"×

13"□, 8¹/₂" × 11"□□, 7¹/₄" ×

10¹/₂"□□, 5¹/₂" × 8¹/₂"□,

8K□, 16K□□

#Important

☐ If the specified paper size differs from the actual size of the paper loaded in the paper tray, a misfeed might occur because the correct paper size was not detected.

Note

☐ Default:

• Metric version: $8^1/2^{"} \times 11^{"}\Box$

• Inch version: A4

- If the paper size set for the selector in the paper tray is different from the paper size for this setting, the paper size of the selector has priority.
- ☐ If you load paper of a size not indicated on the paper size selector in the paper tray, set the selector to "★".

p.59 "Changing the Paper Size"

Paper Type: Bypass tray

Set the display so you can see what type of paper is loaded in the bypass tray.

- The paper types you can set for the bypass tray are as follows:
 - recycled paper, special paper, colour paper, letterhead, prepunched paper, label paper, bond paper, thick paper, OHP, cardstock

Note

☐ Default: Thick Paper

Paper types you can set in the bypass tray for machines with the copy function only are plain paper, thick paper and OHP.

Timer Settings

Auto Off Timer

After a specified period has passed, following job completion, the machine automatically turns off, in order to conserve energy. This function is called "Auto Off". The machine status after the Auto Off operation is referred to as "Off mode". For the Auto Off Timer, specify the time to elapse before Auto Off.

Note

□ Default: 1 min.

- ☐ The time can be set from 1 to 240 minutes, using the number keys.
- ☐ From "Off mode", the machine is ready to use within 10 seconds
- ☐ Auto Off may not work when error messages appear.

Energy Saver Timer

The machine automatically enters Low Power mode automatically after a job is finished, and the selected time elapsed.

Note

- ☐ Default: 1 min.
- ☐ The time can be set from 1 to 240 minutes, using the number key.
- ☐ Energy Saver may not work when error messages appear.

System Auto Reset Timer

The System Reset setting automatically switches the screen to the copier display when no operations are in progress, or when an interrupted job is cleared. This setting determines the system reset interval.

Note

- □ Default: *On*, 60 sec.
- ☐ The time can be set from 10 to 999 seconds, using the number keys.

Copier Auto Reset Timer

Specify the time to elapse before copier modes reset.

Note

- ☐ If [Off] is selected, the machine does not automatically switch to the user code entry screen.
- ☐ Default: *On*, 60 sec.
- ☐ The time can be set from 10 to 999 seconds, using the number keys.

Key Operator Tools

The key operator must set the following items. For settings or more information, contact the key operator.

It is recommended that the key operator program a key operator code when performing the settings. See p.40 "Key Operator Code".

User Code Man.: Copier

Allows you to control who uses the machine by setting codes for users. User codes must be registered for user code management.

☐ Default: Off

Key Counter Management

Use the key counter to specify whether users are restricted or not.

Note

☐ Default: Off

[Key Counter Management] will only be displayed when the key counter is set.

Key Operator Code

Specify whether or not to use passwords (max. eight digits) to control Key Operator Tools settings for key operator code.


Note

- ☐ Default: Off
- ☐ If you select [On], enter the key operator code (max. eight digits) using the number keys, and then select [On:Partial] or [On:All] to set the access limit.
 - If you selected [On:Partial]
 A key operator code is only required for the Timer Settings and Key Operator Tools for System Settings.
 - If you selected [On:All]
 A key operator code is required to access all items in System Settings and Copier Features.
- If you select [On:All], you must enter a key operator code to access the Key Operator Code display.

Display/Print Counter

Allows you to view and print the number of prints.


- Display/Print Counter
 Displays the number of prints
 for each function (Total, Copier
 and A3/DLT).
- Print Counter List
 Prints out a list of the number of
 prints made under each function.
- To print the counter list
 - ① Press the [User Tools/Counter] key.

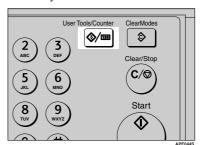


② Select [System Settings] using [▲] or [▼], and then press the [OK] key.



③ Select [Key Operator Tools] using [▲] or [▼], and then press the [OK] key.



Select [Display/Print Counter] using [▲] or [▼], and then press the [OK] key.



⑤ Press [Print].

Counter:	1/1 ‡ 0K
Total	2
A3/DLT	0
Print	

Press the [Start] key.



⑦ Press the [User Tools/Counter] key.

Counter per User Code

Allows you to view and print the numbers of prints accessed with user codes, and to set those values to 0.

Note

- □ Press [♠] and [▼] to show all the numbers of prints.
- ☐ The number of prints may differ from the counter value shown in Display/Print Counter.
 - Print counter per user code
 Prints the number of prints
 made under each user code.
 - Clear counter per user code Sets the number of prints made under each user code to 0.
- ☐ Print list for each user code, see p.47 "Printing the Counter for Each User Code".
 - Print counter for all user codes
 Prints the number of prints made under all user codes.
 - Clear counter for all user codes
 Sets the number of prints made under all user codes to

Program/Change User Code

You can register, change, and delete user codes. For details about these operations, see p.44 "User Code".

Ø Note

☐ You can register up to 50 user codes.

AOF (Always On)

Specify whether or not to use Auto Off.



☐ Default: On

Copier Features

Original Type Setting

You can adjust copy finish quality level according to original type. You can choose these functions after selecting [Original Type 1 (Text)] or [Original Type 2 (Photo)].

- Text Mode 1 normal text originals
- Text Mode 2 newspapers, semi-transparent originals (reverse side print faintly visible)
- Photo Mode 1 text/photo images containing mostly photo areas
- Photo Mode 2 text/photo images containing mostly text areas
- Photo Mode 3 actual photographic paper
- Special Mode 1
 Highly transparent originals (reverse side clearly visible), or light text on a coloured background.
 Also for originals with very grainy backgrounds (some newspapers) and light text.
- Special Mode 2 originals with coloured text and lines
- Special Mode 3
 photo images created by dithering
 (visible dots), such as newspaper
 photos normal resolution
- Special Mode 4
 photo images created by dithering (visible dots), such as newspaper photos coarse resolution
- Special Mode 5 normal text originals (reproducing the background)

- ☐ Default:
 - Original Type 1 (Text): Text Mode 1
 - Original Type 2 (Photo): Photo Mode 1

Max. Number of Sets

The maximum copy quantity can be set between 1 and 99 using number keys.



☐ Default: 99 sheets

Original Count Display

You can set to display the count of originals and copying pages on the display when **[On]** is selected.

Note

☐ Default: Off

Reproduction Ratio

You can select which reduce, enlarge, or input ratio is shown on the display with priority when [Reduce] or [Enlarge] is selected.

Note

- ☐ Default:
 - Metric version:
 - Ratio 1: 50%
 - Ratio 2: 71%
 - Ratio 3: 82%
 - Ratio 4: 93%
 - Ratio 5: 122%
 - Ratio 6: 141%
 - Ratio 7: 200%
 - Inch version:
 - Ratio 1: 50%
 - Ratio 2: 65%
 - Ratio 3: 78%
 - Ratio 4: 93%
 - Ratio 5: 121%
 - Ratio 6: 129%
 - Ratio 7: 155%

Preset R/E Priority

You can set the ratio with priority when **[R/E]** is selected.

Note

☐ Default:

• Metric version: 71%

• Inch version: 65%

Letterhead Setting

If you select **[On]** for this function, the machine rotates the image correctly.

- Note
- ☐ Default: Off
- ☐ Orientation-fixed (top to bottom) paper might not print correctly, depending on how the originals and paper are placed.

When using letterhead paper, check its orientation is correct. See p.53 "Orientation-Fixed Paper or Two-Sided Paper".

User Code

Register user codes to restrict copier functions to certain users, and check on their use of copier functions:

Registering a New User Code

1 Press the [User Tools/Counter] key.




Select [System Settings] using [▲] or [▼], and then press the [OK] key.




Select [Key Operator Tools] using

[▲] or [▼], and then press the


[OK] key.




Select [Program/Change User Code] using [▲] or [▼], and then press the [OK] key.



Select [Program] using [▲] or [▼], and then press the [OK] key.



6 Enter the user code using the number keys, and then press the [OK] or [#] key.

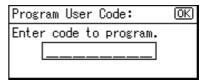

The "Programmed" message appears, and then the "User Code" display returns.

Press the [User Tools/Counter] key.


Changing a User Code

Note

- ☐ Even if you change a user code, the counter value will not be cleared.
- Press the [User Tools/Counter] key.
- Select [System Settings] using [▲] or [▼], and then press the [OK] key.
- Select [Key Operator Tools] using

 [▲] or [▼], and then press the


 [OK] key.
- Select [Program/Change User Code] using [▲] or [▼], and then press the [OK] key.
- Select [Change] using [▲] or [▼], and then press the [OK] key.
- Enter the registered user code you want to change using the number keys, and then press the [OK] or [#] key.



Note

□ When you select the user code from the User Code List, press [List]. Select the user code you want to change using [♠] or [♥], and then press the [OK] key twice.

Enter the new user code using the number keys, and then press the [OK] or [#] key.



The "Programmed" message appears, and then the "User Code" display returns.


Press the [User Tools/Counter] key.

Deleting a User Code

∰Important


- ☐ This operation also deletes user codes registered to multiple functions. User control via the deleted user code is no longer possible.
- Press the [User Tools/Counter] key.
- Select [System Settings] using [▲] or [▼], and then press the [OK] key.
- Select [Key Operator Tools] using [▲] or [▼], and then press the [OK] key.
- Select [Program/Change User Code] using [▲] or [▼], and then press the [OK] key.
- Select [Delete] using [▲] or [▼], and then press the [OK] key.

Select [Per User Code] or [All User Codes] using [▲] or [▼], and then press the [OK] key.



When selecting [All User Codes], a confirmation message appears. Press [Yes], and then proceed to step [].

Enter the registered user code you want to delete using the number keys, and then press the [OK] or [#] key.

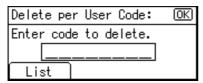

□ When you select the user code from the User Code List, press [List]. Select the user codes you want to delete using [►], and then press the [OK] key.

A confirmation message appears.

Press [Yes].

The "Deleted." message appears, and then the "User Code" display returns.

Press the [User Tools/Counter] key.


Displaying the Counter for Each User Code

You can check the counter for each user code.

- Press the [User Tools/Counter] key.
- Select [System Settings] using [▲] or [▼], and then press the [OK] key.
- Select [Key Operator Tools] using

 [▲] or [▼], and then press the

 [OK] key.
- Select [Counter per User Code] using [▲] or [▼], and then press the [OK] key.
- Select [Display] using [▲] or [▼], and then press the [OK] key.



The counter for each user code will be displayed.

Press the [User Tools/Counter] key.

Printing the Counter for Each User Code

You can print out the counter for each user code.

- Press the [User Tools/Counter] key.
- Select [System Settings] using [▲] or [▼], and then press the [OK] key.
- Select [Key Operator Tools] using

 [▲] or [▼], and then press the

 [OK] key.
- Select [Counter per User Code] using

 [▲] or [▼], and then press the

 [OK] key.
- Select [Print] using [▲] or [▼] and then press the [OK] key.
- Press the [Start] key.
 The counter list prints out.
- Press the [User Tools/Counter] key.

Clearing the Counter

- Press the [User Tools/Counter] key.
- Select [System Settings] using [▲] or [▼], and then press the [OK] key.
- Select [Key Operator Tools] using [▲] or [▼], and then press the [OK] key.
- Select [Counter per User Code] using [▲] or [▼], and then press the [OK] key.
- Select [Clear] using [▲] or [▼], and then press the [OK] key.

A confirmation message appears.

6 Press [Yes].

The "Counter has been cleared." message appears, and then the "Codes:Counters" display returns.

Press the [User Tools/Counter] key.

5. Troubleshooting

If Your Machine Does Not Operate As You Want

The following chart gives explanations of common problems and messages. If other messages appear, follow the instructions displayed.

Problem	Causes	Solutions	
"Please wait." appears.	This message appears when you turn on the operation switch or change the toner bottle.	Wait for the machine to get ready.	
The display is off.	The machine is in Energy Saver mode.	Turn on the operation switch.	
	The operation switch is turned off.		
Nothing happens when the operation switch is turned on.	The main power switch is turned off.	Turn on the main power switch.	
The user code entry display appears.	Users are restricted by user management.	Enter the user code (up to eight digits), and then press the [OK] or [#] key.	
Misfeeds occur frequently.	The tray's side fences may not be locked.	Check the side fences are locked. p.59 "Changing the Paper Size".	
	The tray's end fence may not be set properly.	Check the end fence is set properly. See p.59 "Changing the Paper Size".	
	You may have loaded paper of a size not shown on the paper size selector.	When using paper of a size that cannot be detected automatically, use Tray Paper Settings to set the paper size. See p.38 "Tray Paper Size: Tray 1" and p.78 "Copy Paper".	
An error message remains, even if misfed paper is removed.	When a misfeed message appears, it remains until you open and close the cov- er, as required.	Clear misfed paper, and then open and close the front cover. See p.57 "% Clearing Misfeeds".	
You forgot your key operator code.	_	Contact your service representative.	
"Max. number of sets is *"appears.	The number of copies exceeds maximum copy quantity.	You can change the maximum copy quantity. See p.42 "Max. Number of Sets" .	

If You Cannot Make Clear Copies

Problem	Causes	Solutions	
Copies appear dirty.	Image density is too dark.	Adjust the image density. See p.28 "Adjusting Image Density".	
The reverse side of an original image is copied.	Image density is too dark.	Adjust the image density. See p.28 "Adjusting Image Density".	
A shadow appears on copies if you use pasted origi-	Image density is too dark.	Adjust the image density. See p.28 "Adjusting Image Density".	
nals.		Change the orientation of the original.	
		Put mending tape over the pasted areas.	
The same copy area is dirty whenever making copies.	The exposure glass or ADF is dirty.	Clean them. See p.67 "Maintaining Your Machine".	
Copies are too light. Image density is too light.		Adjust the image density. See p.28 "Adjusting Image Density".	
	The paper is not appropriate.	Use the recommended paper.	
		Ø Note	
		☐ A light copy may result when you use damp or rough grain paper.	
	Toner bottle is almost empty.	Add toner. See p.54 " Adding Toner".	
Parts of the paper are not copied.	The original is not placed correctly.	Place originals correctly. See p.19 "Placing Originals".	
	An improper paper size is selected.	Select the proper paper size.	
Copies are blank.	The original is not placed correctly.	When using the exposure glass, place originals face down. When using the ADF, place them face up. See p.19 "Placing Originals".	
A moiré pattern is produced on copies.	Your original has a dot pattern image or many lines.	Place the original on the exposure glass at a slight angle.	
R⇒R			

If You Cannot Make Copies As You Want

This section explains causes and remedies when copy results are not as expected.

❖ Basic

Problem	Causes	Solutions	
You cannot combine several functions.	Selected functions cannot be used together.	Check the combination of functions and make the settings again.	
		PReference p.75 "Combination Chart"	


When Memory Is Full

Messages	Causes	Solutions
Reset * orig., then press [Resume] to scan and copy the remaining originals. [Stop][Resume]	The machine checks if the remaining originals should be copied, after the scanned original has been printed.	To continue copying, remove all copies, and then press [Resume]. To stop copying, press [Stop].
Press [Resume] to scan and copy remaining originals.	The machine checks if the remaining originals should be copied, after the scanned original has been printed.	To continue copying, remove all copies, and then press [Resume]. To stop copying, press [Stop].

i Loading Paper

Loading Paper

- Note
- \square You can change the paper size.
- ☐ This illustration shows the paper tray.
- Pull the paper tray out slowly until it stops.
- 2 Square the paper and load it in the tray.

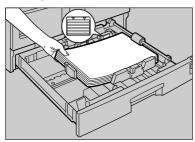

#Important

- Check the top of the stack is not higher than the limit mark inside the tray.
- ☐ Fan the paper before loading.
- ☐ Straighten curled or warped paper before loading.
- When using paper tray 1, before loading paper, push down the metal plate.

Push the paper tray in, until it stops.

Orientation-Fixed Paper or Two-Sided Paper

Orientation-fixed (top to bottom) or two-sided paper (for example, letterhead paper, prepunched paper, or copied paper) might not print correctly, depending on how the originals and paper are placed.

p.43 "Letterhead Setting"


Note

☐ Select [On] in [Letterhead Setting] under [Copier Features] (User Tools), and then place the original and paper as shown below.

Original Orientation

Exposu	re glass	AI	OF
A	50	R	&

Loaded paper orientation

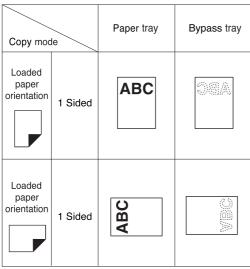

APH004

Adding Toner

When 🛓 appears, it is time to add toner.

Handling Toner

⚠ WARNING:

 Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

A CAUTION:

Keep toner (used or unused) and toner containers out of reach of children.

#Important

- ☐ Faults may occur if you use toner other than the recommended type.
- ☐ When adding toner, do not turn off the operation switch. If you do, settings will be lost.
- ☐ Always add toner when the machine instructs you.
- Do not repeatedly install and remove toner bottles. This will result in toner leakage.
- ☐ Do not shake the removed toner bottle. Remaining toner might scatter.

Note

☐ You can make about 50 copies even after the 🚨 symbol begins flashing, but replace toner early to prevent poor copy quality.

Toner Storage

When storing toner, the following precautions should always be followed:

- Store toner containers in a cool, dry place free from direct sunlight.
- Store on a flat surface.

Used Toner



☐ Toner cannot be re-used.

Removing Toner







- 1: Open the front cover of the machine.
- 2: Lift the green lever.
- 3: Push the green lever, and then gently pull out the holder.
- 4: Press the toner bottle back to raise its top, and then gently pull it out.

Inserting Toner










1: Hold the new bottle horizontally and shake it from side to side five or six times.
2: Remove the black cap.

Note

- ☐ Do not remove the black cap before shaking.
- \square Do not remove the inner cap.
- 3: Put the toner bottle on the holder, and then pull its top forward.
- 4: Push in the green lever until it clicks.
- 5: Press down the green lever.
- 6: Close the machine's front cover.

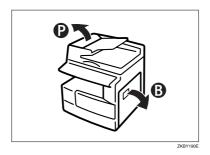

↑ CAUTION:

 The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.

#Important


- When clearing misfeeds, do not turn off the power switch. If you do, your copy settings are cleared.
- ☐ To prevent misfeeds, do not leave any torn scraps of paper inside the machine.
- ☐ If paper misfeeds occur repeatedly, contact your service representative.

Note

- ☐ More than one misfeed area may be indicated. If this is the case, check every applicable area. Refer to the following charts: A, B, P, R, Y, Z.
- ☐ You can find a sticker explaining how to remove misfed paper inside the right cover.
- ☐ When the machine instructs you to reset originals, reset them in the feeding position. The display will show you the number of originals to return.

When P is lit



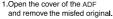




2. Lift the ADF.



3. Pull the green knob of upper left corner and remove misfed original.

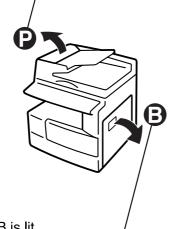

When B is lit



1. Open the right cover and remove the misfed paper.



2. Close the A cover and remove the misfed paper.



3. Pull down the blue knob.



4. Remove the misfed paper.

5. Close the right cover.

GKBY200E

Changing the Paper Size


Preparation

Be sure to select the paper size with User Tools and the paper size selector. If you do not, misfeeds might occur. See p.38 "Tray Paper Size: Tray 1".

For details about paper sizes and types, see p.78 "Copy Paper".


Changing the Paper Size of the Paper Tray

- Make sure the paper tray is not in use.
- Pull the paper tray out slowly until it stops.
 - Note
 - ☐ Remove any remaining copy paper.
- While pressing the release lever, adjust the back fence.

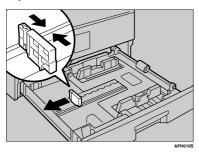


When using 11"× 17"size paper


1 Pull the back fence off from the tray.

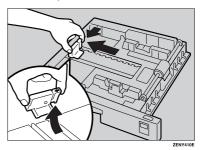


Place it in the corner pocket on the left.

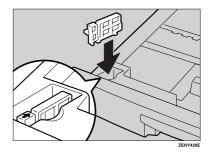


Press down the release button.

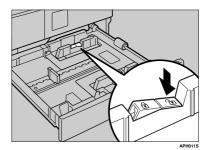


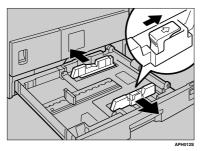

6 Push the metal plate down.

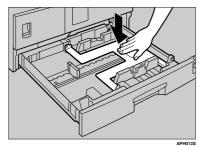


Square the paper and set it in the tray.

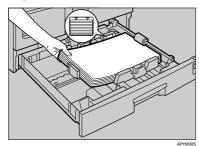

∰Important


- ☐ Be sure to set the paper under the roller.
- ☐ Do not stack paper over the limit mark.

While pressing the release lever, adjust the side and back fences to the new paper size.

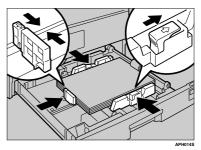

#Important

- ☐ When setting small quantities of copy paper, be careful not to squeeze in the side fence too much or paper will not feed in properly.
- Press down the lock button.
- Adjust the tray size to the new paper size using the paper size selector.

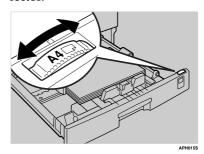

- Note
- ☐ Be sure to set the correct size, otherwise a paper jam might occur.
- Push the paper tray in until it stops.

6. Other Functions

Other Functions

Displaying the Total Counter

You can display the total counter value used for all functions.

Press the [User Tools/Counter] key.



Select [Counter] using [▲] or [▼], and then press the [OK] key.



To print the counter list, press [Print].



Ø Note

- ☐ To print the counter list, set the paper size to larger than A4 or 81/2" × 11".
- 4 Press the [Start] key.

A counter list prints out.

Press the [User Tools/Counter] key.

Changing the Language

You can change the language used on the display. English is set as default.

Press the [User Tools/Counter] key.



Select [Language] using [▲] or [▼], and then press the [OK] key.



Select the language using [] or [], and then press the [OK] key.



The "Programmed" message appears, and then the "User Tools" display returns.

4 Press the [User Tools/Counter] key.

7. Remarks

Do's and Don'ts

A CAUTION:

 Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

∰Important

- Do not turn the power off while the On indicator is lit or blinking. Doing so may damage the memory.
- ☐ Before unplugging the power cord or turning off the main power switch, make sure remaining memory space is at 100%, as shown on the display. See p.16 "Turning Off the Power" and p.16 "Turning Off the Main Power".
- When you use this machine for a long time in a confined space without good ventilation, you may detect an odd smell. To keep the workplace comfortable, we recommend that you keep it well ventilated.
- Do not touch areas on or around the fusing unit. These areas get hot.
- After making copies continuously, the exposure glass may become warm—this is not a malfunction.

- The area around the ventilation hole might feel warm. This is caused by exhaust air and is not a malfunction.
- When the machine is not in use and in stand-by mode, you may hear a small noise inside. This is caused by the image stabilization process and is not a malfunction.
- Do not turn off the operation switch while copying. Make sure all copying has finished first.
- The machine might not produce good copy images if condensation forms inside as a result of rapid temperature change.
- Do not open the covers of the machine while copying. If you do, misfeeds might occur.
- Do not move the machine during copying.
- If you operate the machine improperly or a machine failure occurs, settings might be lost. Be sure to make a note of your machine settings.
- The manufacturer shall not be liable for any loss or damage resulting from mechanical failure, loss of settings, or use of the machine.

7

Where to Put Your Machine

Machine Environment

Choose your machine's location carefully. Environmental conditions greatly affect its performance.

Optimum environmental conditions

⚠ CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

↑ CAUTION:

- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.
- Temperature: 10-32 °C (50-89.6 °F) (humidity to be 54% at 32 °C, 89.6 °F)
- Humidity: 15-80% (temperature to be 27 °C, 80.6 °F at 80%)
- A strong and level base.
- The machine must be level within 5 mm, 0.2 inches: both front to rear, and left to right.
- To avoid possible buildup of ozone, be sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m³/hr/person.

Environments to avoid

- Locations exposed to direct sunlight or other sources of strong light (more than 1,500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes can cause condensation to form inside the machine.)
- Locations close to machines generating ammonia, such as a diazo copy machine.
- Places where the machine will be subject to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Moving

A CAUTION:

 Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

riangle CAUTION:

 Before moving the machine, be sure to pull all four handles fully out. If not, an injury might occur. After moving the machine, return the four handles to their original positions.

#Important

- Be careful when moving the machine. Take the following precautions:
 - Turn off the main power. See p.16 "Turning Off the Main Power".
 - Unplug the power cord from the wall outlet. When you pull out the plug from the socket, grip the plug to avoid damaging the cord, thereby reducing the risk of fire or electric shock.
 - Close all covers and trays, including the front cover and bypass tray.
- ☐ Do not take off the holding stand.
- Protect the machine from strong shocks. Impact can damage the memory.

Power Connection

⚠ WARNING:

- Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.
- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

A CAUTION:


 Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

A CAUTION:

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- When the main power switch is in the stand-by position, the optional anti-condensation heaters are on. In an emergency, unplug the machine's power cord.
- When you unplug the power cord, the anti-condensation heaters turn off.
- Make sure the plug is inserted firmly in the wall outlet.
- Voltage must not fluctuate by more than 10%.
- The wall outlet shall be installed near the machine and shall be easily accessible.

Access to the Machine

Place the machine near the power source, providing the clearance areas shown.

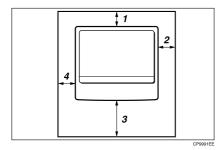

1. Rear: 5 cm (2") or more

2. Right: 25 cm (10") or more

3. Front: 75 cm (29.6") or more

4. Left: 15 cm (6") or more

Note

☐ For the required space when options are installed, contact your service representative.

7

Maintaining Your Machine

If the exposure glass, exposure glass cover or ADF belt is dirty, copy clarity may be reduced. Clean these parts if they are dirty.

Cleaning the machine

Wipe the machine with a soft, damp cloth. Then wipe it with a dry cloth to remove the water.


#Important

- Do not use chemical cleaner or organic solvents such as thinner or benzene. If such substances get inside the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those explicitly specified in this manual.
 Other parts should only be cleaned by your service representative.


Cleaning the Exposure Glass



Cleaning the Exposure Glass Cover

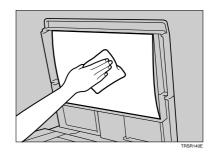

Cleaning the ADF

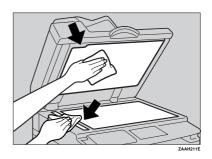

8. Security

Security

Confidential information is always at risk of being copied without permission or subject to unauthorized access through the network. To protect documents from such intrusion, not only can passwords be set, but also the Extended Security function can be used to strengthen security.

For those who require increased document protection, we recommend the Extended Security function.

Primary Security Functions

Protecting Image Data Remaining in Memory

Protects image data remaining in memory. When a copy job is completed, or a job is canceled, the data is secure.

Authenticating Administrator

Protects essential functions for administrating document security using an access code. See p.40 "Key Operator Code".

Operating Environment and Notes

Security for this machine is assured on the premises that the machine is used under the following conditions:

Operating Environment

- The condition of the machine is normal. (For example, it is not damaged, modified, or lacking components.)
- The machine is managed by an administrator with thorough knowledge of the machine and capable of providing the proper conditions under which users can use the machine safely.

For Administrator

- Security of this machine cannot be assured if any hardware component is detached or replaced with an inappropriate component. If these things have the possibility of occurring, other security measures are necessary.
- Avoid using a single number or consecutive numbers for a key operator code such as "00000000" or "12345678". Since the numbers like this are easy to guess, using them will not provide the appropriate level of security.
- User code is a function to help manage the use of the machine. It is not to protect confidential documents from others.

R)

9. Specifications

Main Unit

Configuration:

Desktop

Photosensitivity type:

OPC drum

Original scanning:

One-dimensional solid scanning system through CCD

❖ Copy process:

Dry electrostatic transfer system

Development:

Dry two-component magnetic brush development system

❖ Fusing:

Heating roll pressure system

Resolution:

600 dpi

* Exposure glass:

Stationary original exposure type

Original reference position:

Rear left corner

❖ Warm-up time:

From the main power switch 15 seconds or less (20 °C) From the operation switch 10 seconds or less (20 °C)

❖ Originals:

Sheet/book/objects

❖ Maximum original size:

A3□, 11" × 17"□

Copy paper size:

• Tray: A3 \square - A5 \square , 11" × 17" \square - 5¹/₂" × 8¹/₂" \square

• Bypass: A3 \Box - A6 \Box , 11" × 17" \Box - 5¹/₂" × 8¹/₂" \Box

• Bypass (custom size):

Vertical: 90 – 297 mm, 3.55" – 11.69" Horizontal: 148 – 600 mm, 5.83" – 23.62"

Copy paper weight:

• Paper tray (Standard size): $60 - 90 \text{ g/m}^2$, 16 - 24 lb

• Bypass tray: $52 - 162 \text{ g/m}^2$, 14 - 43 lb

Non-reproduction area:

• Leading edge: 2 ± 1.5 mm $(0.08 \pm 0.06$ inch)

• Trailing edge: more than 0.5 mm (0.02 inch)

• Left edge: 2 ± 1.5 mm $(0.08 \pm 0.06$ inch)

• Right edge: more than 0.5 mm (0.02 inch)

First copy time:

6.5 seconds or less (A4 \mathbb{D} , 8¹/₂" × 11" \mathbb{D} 100%, feeding from Tray 1)

Copying speed:

15 copies/minute (A4 \square , $8^1/2$ " × 11" \square)

* Reproduction ratio:

Preset reproduction ratios:

_	Metric version	Inch version	
Enlargement	200%	155%	
	141%	129%	
	122%	121%	
Full Size	100%	100%	
Reduction	93%	93%	
	82%	78%	
	71%	65%	
	50%	50%	

Zoom: From 50% to 200% in 1% steps.

Continuous copying count:

1 – 99 copies

Copy paper capacity:

• Tray 1: 250 sheets (80 g/m², 20 lb)

• Bypass: 100 sheets (80 g/m², 20 lb)

❖ Power consumption:

Warm up	Less than 1,280 W
Stand-by	About 110 W
During printing	About 440 W
Maximum	Less than 1,280 W

\clubsuit Dimensions (W \times D \times H up to exposure glass):

550 × 568 × 420mm, 21.65" × 22.36" × 16.54"

❖ Noise Emission *1:

• Sound power level

Stand-by	40 dB (A)		
During printing	59 dB (A)		

• Sound pressure level *2

Stand-by	26 dB (A)
During printing	46 dB (A)

^{*1} The above measurements made in accordance with ISO 7779 are actual values.

❖ Weight:

35 kg (78 lb) or less

Note

 $\hfill \square$ Specifications are subject to change without notice.

^{*2} Measured at the position of the operator.

Options

Exposure Glass Cover

Lower this over originals.

Auto Document Feeder (ADF)

❖ Mode:

ADF mode

- ❖ Original size:
 - A3D A5DD
 - $11" \times 17" \square 5^1/_2" \times 8^1/_2" \square \square$
- Original weight:

One-sided originals: $52 - 105 \text{ g/m}^2 (14 - 28 \text{ lb})$

❖ Number of originals to be set: 30 sheets (80 g/m², 20 lb)

❖ Maximum power consumption:

less than 25 W (power is supplied from the main unit.)

- ❖ Dimensions (W × D × H): 550 × 470 × 90 mm, 21.7" × 18.6" × 3.6"
- ❖ Weight: 7 kg (15 lb) or less
- Ø Note
- $\hfill \square$ Specifications are subject to change without notice.

Combination Chart

The combination chart below shows which functions can be used together. When you read the chart, see the following table:

0	These functions can be used together.
•	These functions cannot be used together. The second function selected will be the function you are working in.

The following shows the combinations of functions.

\setminus				Func	tion se	lected	after		
		Custom Size Originals	Regular Size Originals	Bypass Tray	Manual Image Density	Text Originals	Photo Originals	Zoom	Sort
Г	Custom Size Originals		•	0	0	0	0	0	0
	Regular Size Originals	•		0	0	0	0	0	0
d first	Bypass Tray	0	0		0	0	0	0	*1
ecte	Manual Image Density	0	0	0		0	0	0	0
on se	Text Originals	0	0	0	0		•	0	0
Function selected first	Photo Originals	0	0	0	0			0	0
Ĺ	Zoom	0	0	0	0	0	0		0
	Sort	0	0	*1	0	0	0	0	

^{*1} This function cannot be combined copy paper longer than 432 mm (□).

APH005

Supplementary Information

Bypass Tray Copy

- The following paper sizes can be selected as standard sizes: A3 \square , A4 \square \square , A5 \square \square , B4 JIS \square , B5 JIS \square \square , B6 JIS \square , 11"×17" \square , $8^1/2$ "×14" \square , $8^1/2$ "×11" \square \square , $5^1/2$ "×8 $^1/2$ " \square , $7^1/4$ "×10 $^1/2$ " \square \square , 8"×13" \square , $8^1/2$ "×13" \square , $8^1/4$ "×13" \square , 8K \square , 16K \square \square , $4^1/8$ "×9 $^1/2$ " \square , $3^7/8$ "×7 $^1/2$ \square ", C5 Env \square , C6 Env \square , DL Env \square
- When the beeper is turned off, it will not sound if you insert paper into the bypass tray.

❖ Preset Enlarge/Reduce

- You can select one of 7 preset ratios (3 enlargement ratios, 4 reduction ratios).
- You can select a ratio regardless of the size of an original or copy paper.
 With some ratios, parts of the image might not be copied or margins will appear on copies.
- Copies can be reduced or enlarged as follows:

Metric version

Ratio (%)	Original → Copy paper size
200 (enlarge area by 4)	A5→A3
141 (enlarge area by 2)	A4→A3, A5→A4
122	F→A3, A4→B4 JIS
115	B4 JIS→A3
93	
82	F→A4, B4 JIS→A4
71 (reduce area by $1/2$)	A3→A4, A4→A5
65	A3→F
50 (reduce area by $^1/_4$)	A3→A5, F→A5

❖ Inch version

Ratio (%)	Original → Copy paper size
200 (enlarge area by 4)	$5^{1}/_{2}" \times 8^{1}/_{2}" \rightarrow 11" \times 17"$
155 (enlarge area by 2)	$5^{1}/_{2}$ " × $8^{1}/_{2}$ " → $8^{1}/_{2}$ " × 14"
129	$8^{1}/_{2}" \times 11" \rightarrow 11" \times 17"$
121	$8^{1}/_{2}" \times 14" \rightarrow 11" \times 17"$
93	
85	$F \rightarrow 8^1/2" \times 11"$
78	$8^{1}/_{2}$ " × 14" \rightarrow $8^{1}/_{2}$ " × 11"
73	$11" \times 15" \rightarrow 8^1/_2" \times 11"$
65	$11" \times 17" \rightarrow 8^1/_2" \times 11"$
50 (reduce area by ¹ / ₄)	$11" \times 17" \rightarrow 5^1/_2" \times 8^1/_2"$

❖ Zoom

- The reproduction ratios you can specify are 50–200%.
- You can select a ratio regardless of the size of an original or copy paper.
 With some ratios, parts of the image might not be copied or margins will appear on copies.

Recommended Paper Sizes and Types

The following limitations apply to each tray:

		Metric version	Inch version	Paper weight	Paper capaci- ty
Paper tray 1			,8 ¹ / ₂ "×14"□, 4"×14"□,8 ¹ / ₄ "× 8 ¹ / ₂ "×11"□□, 9,5 ¹ / ₂ "×8 ¹ / ₂ "□, *4 Ty the paper size ools or the paper see p.59 "Changing	60-90 g/m², 16 - 24 lb	250 sheets *1
Bypass	Standard	A3□ , B4JIS□		$52 - 162 \text{ g/m}^2$,	10 sheets *1
tray	Sizes	A4 □ □, B5JIS □ □ B6JIS□	7, A5 [] □7,	14 – 43 lb	100 sheets *1
		11" × 17" □ *², 8¹/4" × 3 13" (F4) □ ,8¹/4" × 3 13" □ ,8" × 13" (F) □ 7¹/4" × 10¹/2" □ □ 8K □ *³, 16K □ □	$14"\Box^{7}, 8^{1}/_{4}" \times \\ 7, 8^{1}/_{2}" \times 11"\Box^{7}, \\ 7, 5^{1}/_{2}" \times 8^{1}/_{2}"\Box^{7},$		
		A3□, B4JIS□		$60 - 157 \text{ g/m}^2$,	10 sheets *1
		A4 □ □, B5JIS □ □ B6JIS□	₽, A5 [] [₽,	16 – 42 lb	40 sheets *1
		11"×17"□, 8 ¹ / ₂ " 13"□, 8 ¹ / ₄ "×13"□ ×11"□□, 7 ¹ / ₄ "× ×8 ¹ / ₂ "□, 8K□ *3	$7.8" \times 13" \square , 8^1/_2"$ $10^1/_2" \square \square , 5^1/_2"$		
		☐ You can specif	y the paper size.		
	Custom sizes *5	Translucent paper (A3□, B4JIS□), OHP transparencies			10 sheets
		Translucent paper (A4 □ □, B5JIS □□)			40 sheets
		Adhesive labels (B4JIS□, A4□)			1 sheet
		Envelope (C5, C6, Commercial #10)	DL, Monarch,		10 sheets

- *1 Paper weight: 80 g/m², 20 lb
- *2 When you set custom size paper in the bypass tray, You can specify the size.
- *3 8K(Ba-Kai) = $267 \times 390 \text{ mm}$, $10.6'' \times 15.4''$
- *4 16K(Shi-Lui-Kai) = 195 × 267 mm, 7.7" × 10.6"
- *5 Set one sheet at a time for your needs.

#Important

☐ If you use damp or curled paper, a misfeed might occur. In such a case, try turning over the paper stack in the paper tray. If there is no improvement, change to copy paper with less curl.

☐ When using the bypass tray, we recommend you set the copy paper direction to □.

₽ Reference

To change the paper size, see p.59 "Changing the Paper Size".

Unusable Paper

↑ CAUTION:

 Do not use aluminum foil, carbon paper, or similar conductive paper to avoid a fire or machine failure.

∰Important

- ☐ Do not use any of the following kinds of paper or a fault might occur:
 - Art paper
 - Aluminum foil
 - Carbon paper
 - Conductive paper
- ☐ Do not use copy paper that has been already copied on. Otherwise, a paper misfeed might occur.

- ☐ Do not use any of the following kinds of paper or a misfeed might occur.
 - Bent, folded, or creased paper
 - Torn paper
 - Slippery paper
 - Perforated paper
 - Rough paper
 - Thin paper that has low stiffness
 - Paper with a dusty surface
- ☐ If you make copies on rough grain paper, the copy image might come out blurred.
- ☐ Do not use paper already copied or printed on.

9

Paper Storage

𝚱 Note

- $\hfill\square$ When storing paper, the following precautions should always be followed:
 - Do not store paper where it will be exposed to direct sunlight.
 - Avoid storing paper in humid areas (humidity: 70% or less).
 - Store on a flat surface.
- ☐ Keep open reams of papers in the package, and store as you would unopened paper.
- ☐ Under conditions of high temperature and high humidity, or low temperature and low humidity conditions, store papers in a plastic bag.

INDEX

zoom, 29

<u>A</u>	Copying, 23
Accessing user tools (System Settings), 36 Adding toner, 54 ADF, 11 Adjusting image density, 28 AOF (Always On), 41 Auto Document feeder (ADF), 74 Auto Off / Low Power, 16	Copying from bypass tray, 24 onto custom size paper, 26 onto envelops, 27 onto regular size paper, 25 onto special paper, 26 Copy paper, 78 Counter per User Code, 41
Auto off timer, 39 Auto reset timer copier, 39 B	Deleting a user code, 45 Display, 13 Display Contrast, 38 Displaying the counter for each user
Basic procedure, 23 Bypass tray, 10	code, 46 Displaying the total counter, 61 Display/Print Counter, 40 Do's and Don'ts, 63
Changing a user code, 45 Changing default settings, 36 Changing the language, 61 Changing the paper size, 59 Changing the Paper Size of the Paper Tray, 59 Cleaning	Energy Saver Timer, 39 Environment, 64 Exposure glass, 9 Exposure glass cover, 11,74 External options, 11
ADF or ARDF, 67 exposure glass, 67 exposure glass cover, 67 Clearing misfeeds, 57 Clearing the counter, 47 Combination chart, 75	For administrator, 70 Front cover, 10 G
Common key operations, 14 Control Panel, 9 Control panel, 12 Copier Features letterhead setting, 43	General Features, 38 Guide to components, 9
max. number of sets, 42 original count display, 42 original type setting, 42	Handling toner, 54
preset r/e priority, 43 reproduction ratio, 43 Copy Count Display, 38 Copy functions, 28 adjusting image density, 28 preset reduce/enlarge, 29 selecting copy paper, 28 selecting original type setting, 28 sort, 30	If your machine does not operate as you want, 49 Inserting toner, 56 Internal tray, 9

K

Key Counter Management, 40 Key Operator Code, 40 Key Operator Tools, 40 Key Repeat, 38

ı

Loading paper, 52

М

Machine environment, 64
Main power indicator, 9
Main power switch, 9, 15
Maintaining, 67
Main unit, 71
Measurement Unit, 38
Missing image area, 18
Moving, 64

Ν

Non-compatible originals for the ADF or ARDF, $\,$ 18

0

Operating environment, 70
Operating environment and notes, 70
Operation switch, 15
Operation switch (On indicator), 9
Options, 11, 74
Orientation-Fixed Paper or Two-Sided
Paper, 53
Original
orientation, 19
Originals, 17
Other functions, 61

Ρ

Paper
loading, 52
Paper Storage, 80
Paper tray, 10
Paper type
Bypass tray, 39
Photo, 28
Placing
custom size originals, 20
originals, 19, 20, 21
originals in ADF/ARDF, 20
originals on exposure glass, 19
regular size originals, 21

Placing Originals, 17
Power connection, 65
Primary security functions, 69
Printing the counter for each user code, 47
Program/Change User Code, 41

Q

Quitting user tools, 37

R

Reading the display and using keys, 14 Recommended paper sizes and types, 78 Registering a new user code, 44 Remarks, 63 Removing toner, 55 Right cover, 10

S

```
Safety information, 4
Saving energy, 16
Security, 69
Selecting
    copy paper, 28
     original type setting, 28
Settings you can change with user
 tools, 38
Sizes
    of recommended originals, 17
Sort, 30
Sort key, 13
Specifications, 71
Supplementary information, 76
Supplementary informations
     bypass tray copy, 76
     preset enlarge/reduce, 76
     zoom, 77
```

Text, 28
Timer settings, 39
Toner
adding, 54
handling, 54
inserting, 56
removing, 55
storage, 54
used, 54
Toner storage, 54
Tray paper settings, 38
Tray paper size, 38
Troubleshooting, 49
memory is full, 51
you cannot make clear copies, 50
you cannot make copies as you want, 51
Turning Off
main power, 16
power, 16
Turning On, 15
main power, 15
power, 15

u

Unusable paper, 79 Used toner, 54 User code, 44 User Code Man.: Copier, 40 User Tools Menu (Copier Settings), 35 User Tools Menu (System Settings), 33

V

Ventilation holes, 9

W

Weights

of recommended originals, 17

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

- I means POWER ON.
- (b) means STAND BY.





